



## Yealink IP Phone

### Quick Installation Guide




## Introduction

Setting up a Yealink IP phone with Ooma Office for WeWork is quick, and can be accomplished in just a few simple steps.

Your IP Phone has been pre-configured and will go into service automatically after it is connected to an Internet connection.

## Package Contents

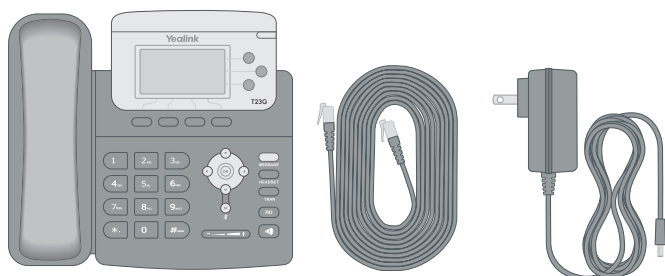

Yealink IP phone

Ethernet cable


Power adapter

## Step 1 Assemble Phone



Follow the instructions in the phone's user manual to assemble the phone and connect the power supply.

## Step 2 Start Up Phone

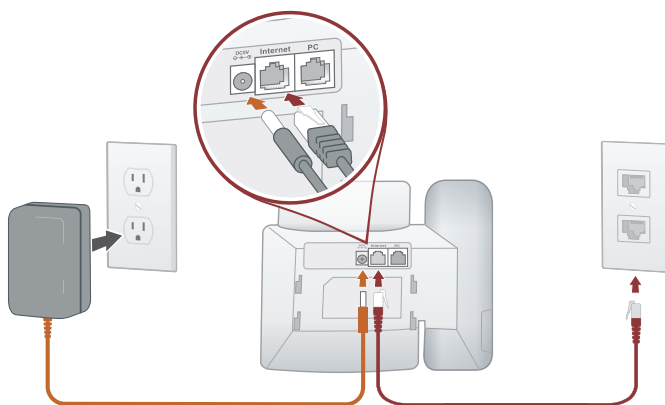

Use the Ethernet cable that came with the phone to connect the **INTERNET** port on the back of the phone to an available Internet port in your WeWork office.

The start up process will take several minutes, during which the phone will restart a few times. Once you see a solid black phone icon on the screen, the phone is ready to place and receive calls!

To learn more about using your phone, go to [ooma.com/wework](http://ooma.com/wework). For help, call us at **1800 531 894**.